



PawHut

IN251100437V01_GL

D51-435V04

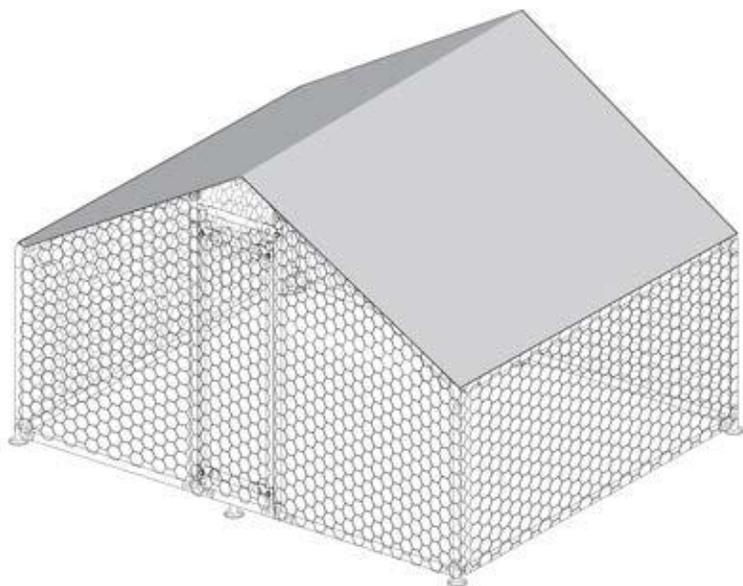

DŮLEŽITÉ: UCHOVEJTE SI TENTO NÁVOD PRO BUDOUCÍ POUŽITÍ, ČTĚTE POZORNĚ



1 x 4
918



2 x 5
1915



3 x 4
1292



4 x 4
950



5 x 1
1785



5A x 1
1785



6 x 1
595



7 x 1
1880



A x 1
1690



1A x 1
1690



C x 2
565

D x 5



E1 x 2



E2 x 2



F x 1



G x 1



V x 1



I x 8



J x 2




J1 x 2




K x 18
M6
+1(spare)



M x 2




O x 1



P x 1



Q x 1



R x 20



S x 1



T x 2





W x 6






UPOZORNĚNÍ: E1 a E2 musí být instalovány ve stanoveném pořadí, jinak je nelze namontovat.

ODLIŠNÉ UMÍSTĚNÍ OTVORŮ U E1 A E2.

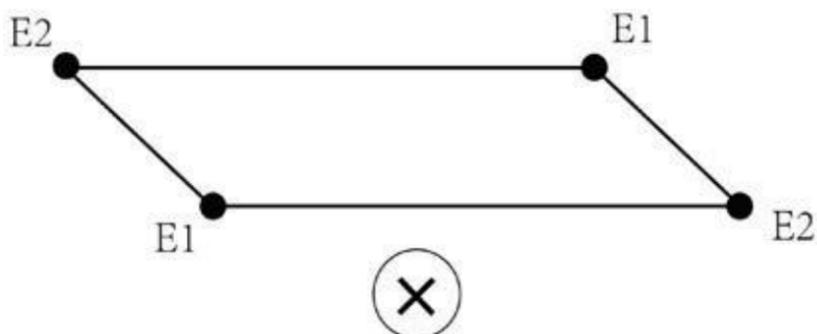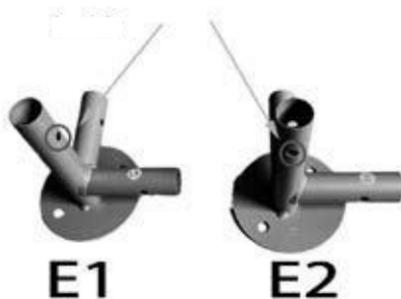

KROK 1


Potřebné nástroje	 ①*4PCS	 ②*2PCS	 E1*2PCS
 E2*2PCS	 G*1PCS	 F*1PCS	

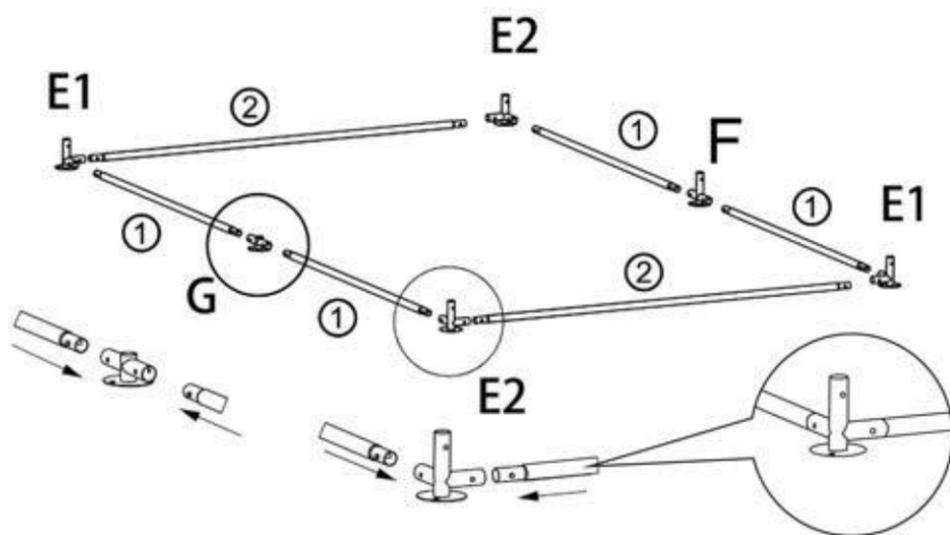

KROK 2


Potřebné
nástroje

③*4PCS

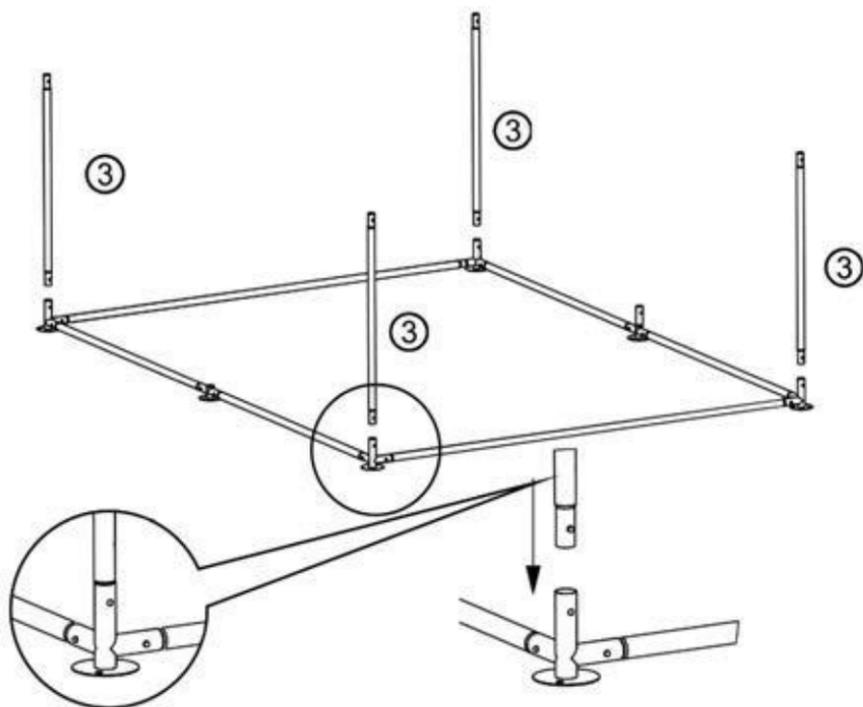


KROK 3


Potřebné nástroje	 ④*4PCS	 D*5PCS	 V*1PCS
-------------------	---	---	---

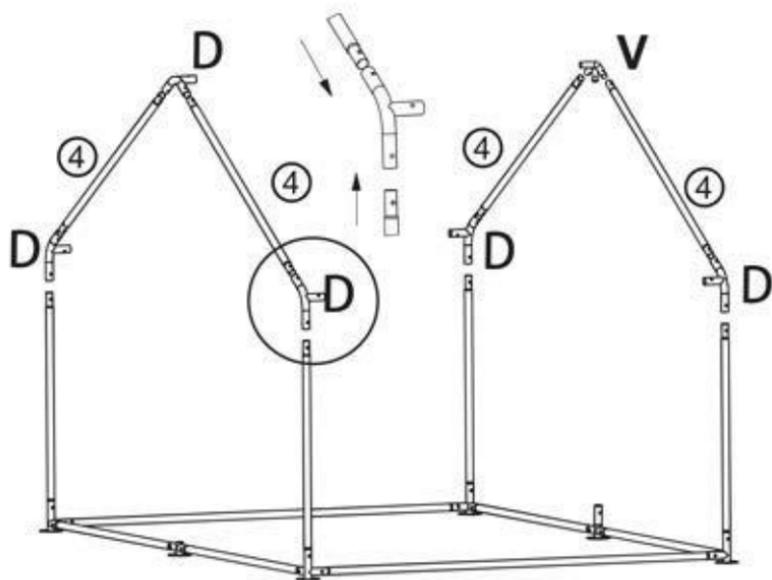


KROK 4

Potřebné
nástroje

②*3PCS




①*1PCS

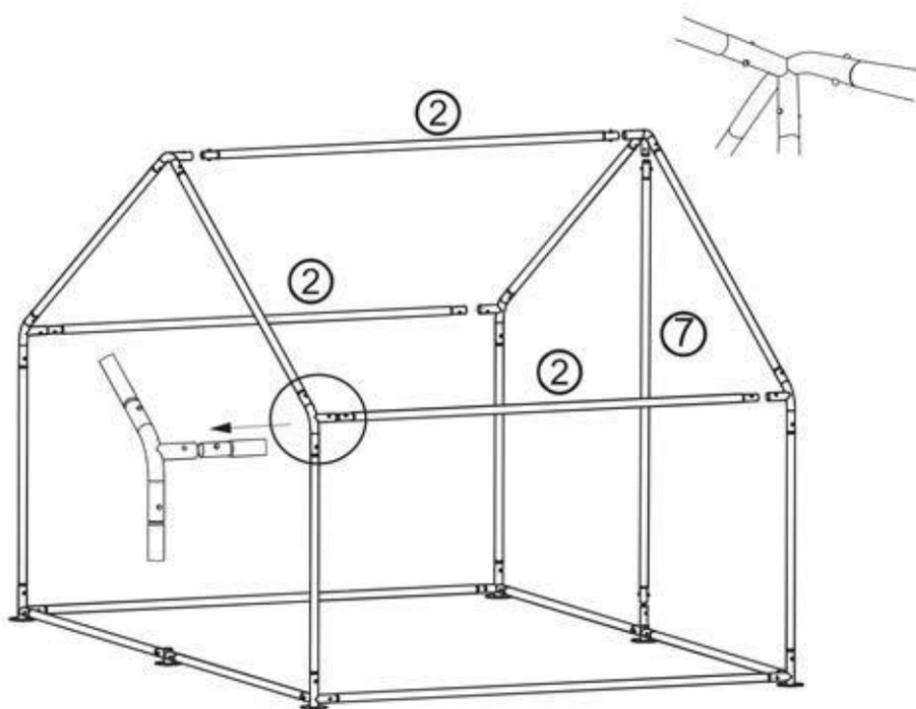


KROK 5

Potřebné nástroje	 ⑤*1PCS	 ⑤A*1PCS	 ⑥*1PCS	 T*2PCS
 J*2PCS	 I*8PCS	 K*8PCS		

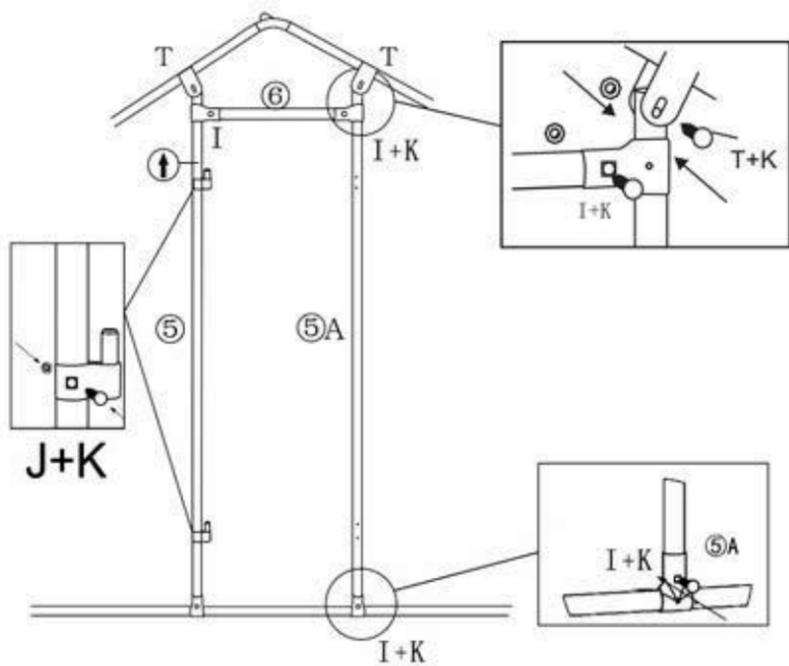

KROK 6

Potřebné nástroje	 1A*1PCS	 A*1PCS	 C*2PCS	 J1*2PCS	 K*6PCS
-------------------	--	---	---	--	---

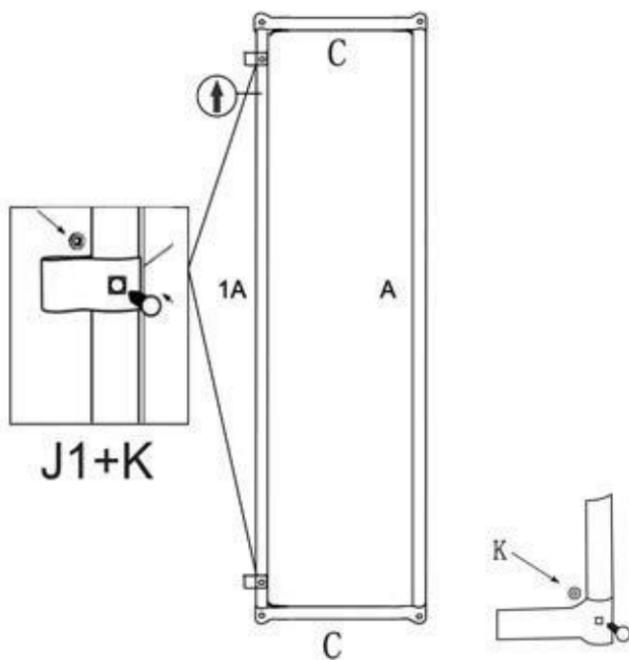


KROK 7Potřebné
nástroje


M*2PCS





K*4PCS

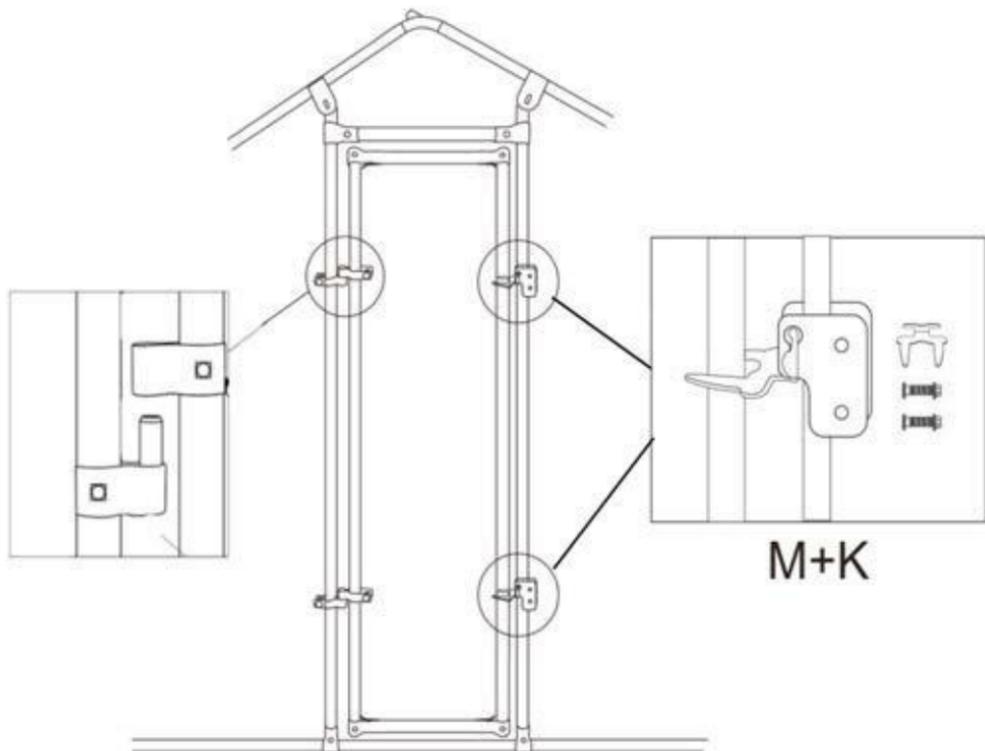

KROK 8

Potřebné nástroje	 Q*1PCS	 O*1SET
-------------------	---	---





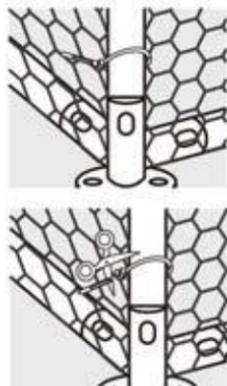
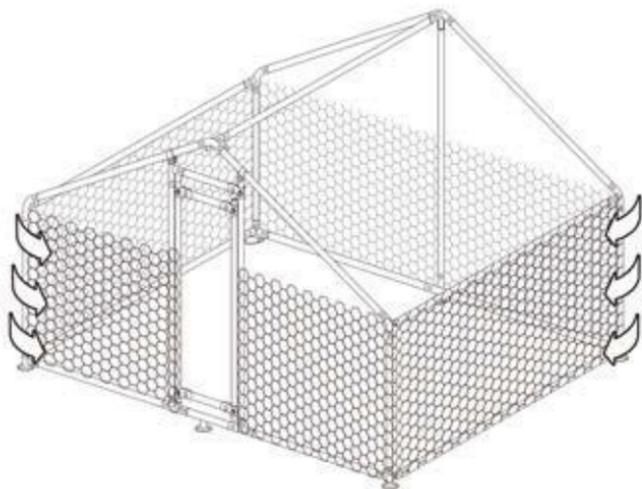


KROK 9Potřebné
nástroje

Q*1PCS



O*1SET

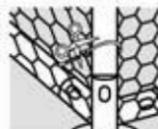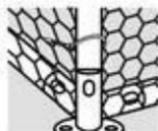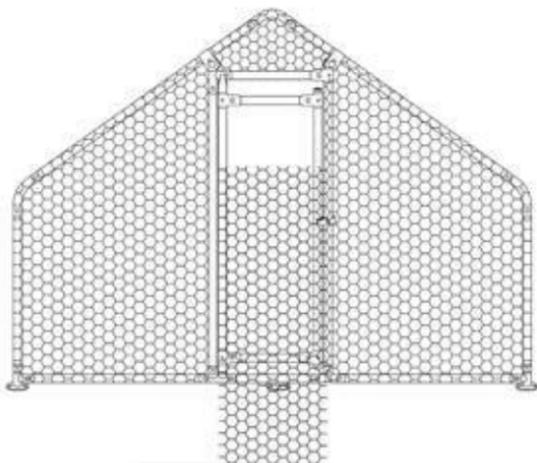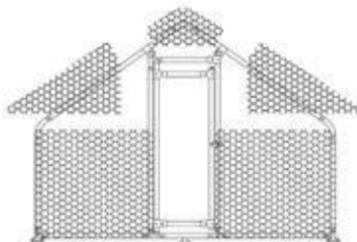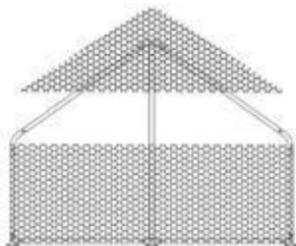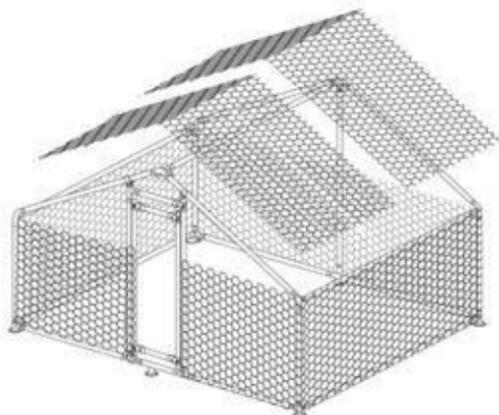

KROK 10

Potřebné nástroje	 P*1PCS	 R*20PCS	 W*6PCS
-------------------	---	--	---

